


Device update via webserver


Update-process

What to do:

1. You need to have the Bender Update File (BUF) to be stored with the required artefacts on your computer.
2. Click the menu button "TOOLS" on the menu on the left hand side at the webserver interface. Afterwards, select "Update".
3. Click "Durchsuchen" to select the BUF from your computer.

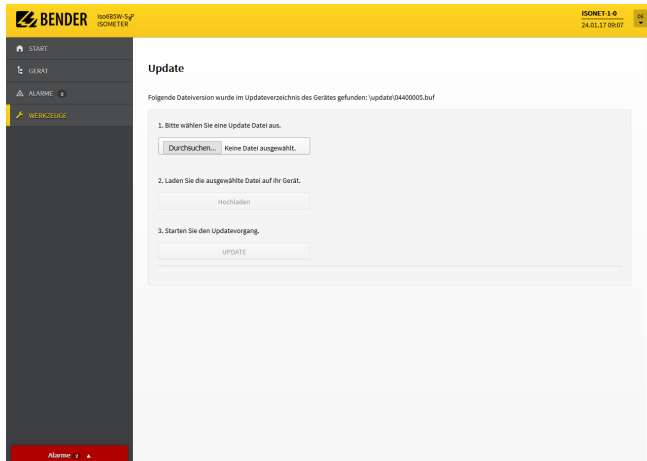

4. Click "Upload", in order to transfer the selected BUF file to the device.
5. After the BUF has been transferred successfully, click the button „Upload“ in order to upload the BUF to your device. The blue bar shows the status of the upload progress. The BUF is being loaded to the mass storage of the device via the webserver. During the update, the BUF is being unpacked and the artefacts are being distributed to the corresponding components.

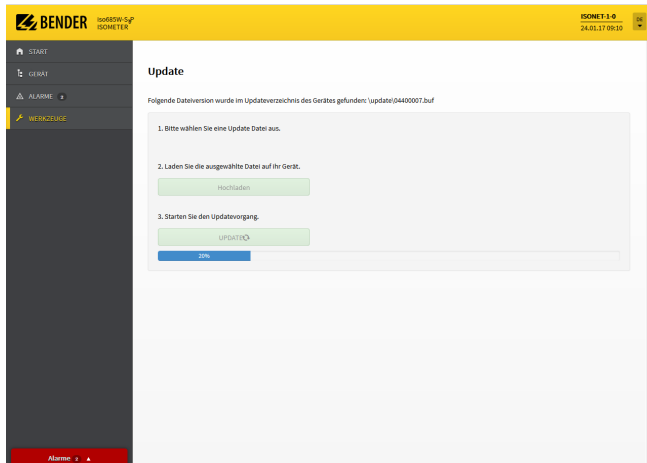

Bender Update File (BUF)

To update the device, a Bender Update File (BUF) is required.

For example, a BUF can consist of the following parts:

- Encrypted HEX-Files
- Menu data for the display
- Binary language tables for the display
- Menu (JSON) for the web application
- Web application
- Fonts
- Customer-specific parameters
- Command files
- Flash routines