

# LINETRAXX<sup>®</sup> RCMB330

AC/DC sensitive residual current monitoring module with integrated divisible measuring current transformer



RCMB330\_D00389\_00\_D\_XXEN/01.2021

Mit Sicherheit Spannung

## LINETRAXX<sup>®</sup> RCMB330

## AC/DC sensitive residual current monitoring module with integrated divisible measuring current transformer

SENDER 🖉



#### LINETRAXX® RCMB330

#### **Device features**

- Continuous residual current monitoring in compliance with DGUV Vorschrift 3 (German Accident Prevention Regulation 3)
- Easy DIN rail or screw mounting
- RS-485 interface with Modbus RTU (reading out measured values/setting parameters)
- Frequency range DC...100 kHz
- Multicolour LED for operation and status messages
- Digitally adjustable filters for AC/DC sensitive measured value acquisition (lowpass filters, type B acc. to IEC 60755, type B+ acc. to VDE 0664-400)
- Separate evaluation of the AC and DC components as well as the RMS value of the residual current possible
- Installation without mechanical separation of the primary conductors
- Extension or modification of functionalities through software updates via Modbus
- Insensitive to load currents due to magnetic screen
- Supply voltage DC 24 V

#### Certifications



#### **Product description**

The RCMB330 residual current monitoring modules are intended for measuring AC and DC fault currents in earthed systems (TN and TT systems). The modules are able to measure residual currents  $I_{\Delta} = 10...500$  mA in a frequency range of DC...100 kHz.


Two separately adjustable response values allow a distinction to be made between prewarning and main alarm.

The modules feature an RS-485 interface with Modbus RTU which can be used to transfer measured values and alarm values. Setting parameters is also possible via this interface.

#### Standards

The RCMB330 residual current monitoring modules comply with the device standard: • IEC 62020-1:2020

#### Wiring diagram

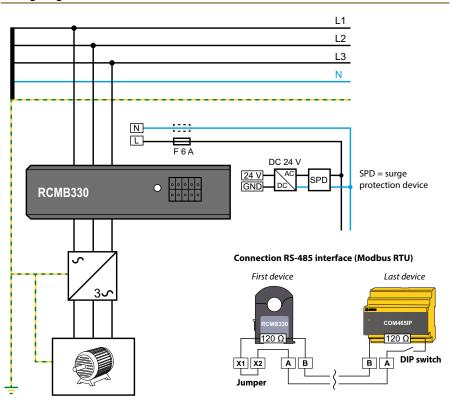

#### RCMB330

By using the jumper, the internal 120  $\Omega$  terminating resistor can be connected.

#### COM465IP


By means of the **DIP switch**, the internal  $120 \Omega$  terminating resistor can be connected.



The **connections** for the power supply (X1, X2) and the RS-485 interface (A, B) are **doubled**, so that the wiring can be carried out directly on the device according to the **daisy-chain** principle required for **Modbus**.



#### **Device view RCMB330**

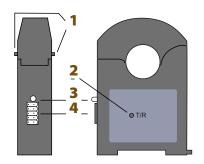

No.	Element	De	Description			
1			Press both elements together simultaneously and flip the RCMB330 open			
2	"T/R" button			;, manual reset, degaussing, n (use pointed object to press)		
3	LED	Cor	Combined LED			
4	Terminal b	inal block				
	Terminal	Pin	no.	Terminal	Description	
	Terminal X1	Pin 5	<b>no.</b> 6	Terminal X2	Description Terminals for jumper to connect the integrated terminating resistor (120 Ω) of the RS-485 interface	
					Terminals for jumper to connect the integrated terminating resistor (120 $\Omega$ ) of the RS-485 interface	
	X1	5	6	X2	Terminals for jumper to connect the integrated terminating resistor (120 $\Omega$ )	

10

+24 V

Supply voltage Us

#### Installation instructions

- Do not route any shielded cables through the measuring current transformer!
- Device damage due to interference pulses!
- The connecting cable (supply, analogue interface...) must not be routed directly past the current transformer core/primary conductor.

#### Protective conductors and live conductors

Make sure that all current-carrying cables are routed through the measuring current transformer.

Never route an existing protective conductor through the measuring current transformer.

The cable diameter may not exceed half the current transformer diameter.


#### **Bending cables**


The cables may only be bent at a certain distance from the measuring current transformer.


\* Distance to 90° angle: 2 x external diameter of the current transformer

#### **Routing cables centrally**

The cables must be aligned with the centre of the measuring current transformer.

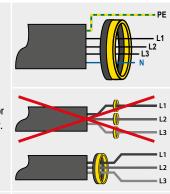





#### **Technical data**

+24 V

Definitions	
Measuring circuit (IC1)	Primary conductors routed through the current transformer
Secondary (IC2)	terminal block (24 V, GND, A, B, X1, X2)
Rated voltage	300 V
Overvoltage category	III
Operating altitude	$\leq$ 2000 m AMSL
Rated impulse voltage	
IC1/IC2	4 kV
Rated insulation voltage	
IC1/IC2	300 V
Pollution degree	2
Basic insulation between	
IC1/IC2	300 V
Supply voltage	
Supply voltage Us	DC 24 V
Operating range of Us	±5 %
Ripple U <sub>s</sub>	≤ 2 %
Power consumption	≤ 0.5 W typ. (2.5 W max.)
Inrush current	10 A for 25 µs

Measuring circuit	
Measuring current transformer, internal d	iameter 25 mm
Characteristics according to IEC 62020-1	AC/DC sensitive, type B
Measuring range	10500 mA
Residual operating current I <sub>An</sub>	30500 mA (freely configurable), (30 mA)*
Prewarning	50100 % I∆n (freely configurable), (60 %)*
Rated current In	100 A
Operating uncertainty	
DC50 kHz	±17.5 %
50100 kHz	0+55 %
Relative uncertainty	
DC50 kHz	035 %
50100 kHz	-15+35 %
Time response	
Response delay ton (prewarning)	50 ms60 min (1 s)*
Response delay t <sub>on</sub> (main alarm)	50 ms60 min (50 ms)*
Start-up delay t <sub>an</sub>	0 s60 min (freely configurable), (0 s)*
Delay on release t <sub>off</sub>	0 s60 min (freely configurable), (1 s)*
Operating time t <sub>ae</sub>	
at 1 x I∆n	≤ 500 ms
at 2 x I∆n	≤ 230 ms
at 5 x I∆n	≤ 100 ms
Response time	$t_{\rm an} = t_{\rm ae} + t_{\rm on}$
Recovery time tb	≤ 1 s

#### Technical data (continued)

Displays	
Multicolour LED	Refer to chapter "LED" in the manual.
Interface	
Interface/protocol	RS-485/Modbus RTU
Baud rate	1.257.6 kbit/s
Cable length	0…1200 m
Environment/EMC	
EMC	IEC 62020-1
Operating temperature	-25…70 °C
Classification of climatic condition	ns acc. to IEC 60721
Stationary use (IEC 60721-3-3)	3K23 (except condensation and formation of ice)
Transport (IEC 60721-3-2)	2K11 (except condensation and formation of ice)
Long-term storage (IEC 60721-3-1)	1K22 (except condensation and formation of ice)
Classification of mechanical condi	tions acc. to IEC 60721
Stationary use (IEC 60721-3-3)	3M11
Transport (IEC 60721-3-2)	2M4
Long-term storage (IEC 60721-3-1)	1M12

## Connection Required terminals are included in the scope of delivery **Terminal block** Manufacturer PCB plug-in connector - DFMC 0.5/ 8-ST-2.54 The connection conditions of the manufacturer apply.

Connection properties	
rigid	0.140.5 mm <sup>2</sup> (AWG 2620)
flexible	0.140.5 mm <sup>2</sup> (AWG 2620)
with ferrules	0.250.34 mm <sup>2</sup> (AWG 2422)

Phoenix Contact

### Other


Туре

Operating mode	continuous operation
Mounting	any position
Degree of protection, internal components (DIN EN 60529)	IP40
Degree of protection, terminals (DIN EN 60529)	IP20
Flammability class	UL94 V-0
Software	D0609
Documentation number	D00389
Weight	≤ 170 g

()\* factory setting

#### **Dimension diagram**

Dimensions in mm, tolerance ±0.5 mm

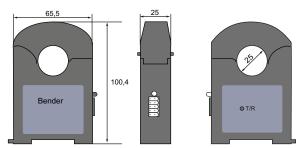

#### **Ordering information**

Supply voltage U <sub>S</sub>	Variant	Туре	Art. No.
DC 24 V (19,228,8 V)	Modbus RTU	RCMB330	B74043160

#### Accessories

Description	Art. No.
RS-485/USB interface converter	B95012045

#### Suitable system components

The use of the listed power supply units is recommended. The use of a surge protection device is mandatory for these power supply units.

Description	Max. connected current transformers	Туре	Art. No.
	4	STEP-PS/1 AC/24 DC/0.5	B94053110
Voltage supply	14	STEP-PS/1 AC/24 DC/1.75	B94053111
suppry	34	STEP-PS/1 AC/24 DC/4.2	B94053112



#### Bender GmbH & Co. KG

Londorfer Straße 65 • 35305 Grünberg • Germany Tel.: +49 6401 807-0 • info@bender.de • www.bender.de

